



MOTORCYCLE TIE DOWN RACK

MODEL NO: **TDPR01**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



Wear eye
Protection

1. SAFETY

1.1. GENERAL SAFETY

- ✓ It is the users responsibility to read and follow all instructions.
- ✓ Keep these instructions with the product at all times and review before each use.
- ✓ Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- **WARNING!** Ensure Health & Safety, and local authority regulations are adhered to when assembling and using this motorcycle tie down rack.
- ✓ Keep the general area clean, uncluttered and ensure there is adequate lighting.
- ✓ All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measures when using this product. Check with vehicle manufacturer's manual before installing.
- ✓ Installing the motorcycle tie down rack requires drilling holes into the bed of your vehicle. Please make sure all measurements are exact before drilling.
- **WARNING!** Erect tie-down rack on a solid surface.
- **WARNING!** Never modify this product in any way.
- * **DO NOT** attempt to mount the motorcycle tie down rack on your own. Obtain assistance.
- * **DO NOT** use the motorcycle tie down rack for any purpose other than that for which it is designed.
- * **DO NOT** clean the motorcycle tie down rack with any solvents which may damage the coated surface.
- ✓ Ensure that the motorcycle tie down rack is properly assembled before loading it with motorcycles.
- * **DO NOT** exceed the recommended capacity of 2 motorcycles.

2. INTRODUCTION


Securely hold up to two motocross bikes, with two wheel chocks and three tie down points. Adjustable width between 1372mm to 1854mm to fit a majority of pick-up truck beds and vans. The tapered wheel slots help to prevent tire slip resulting in damage to the vehicle or bikes. The three heavy-duty tie down loops provide excellent tie down points. Cancelling the need to crisscross tie downs to awkward to reach factory fitted points on the vehicle bed. Heavy-duty steel construction with black powder paint coating for strength and rust resistance.

3. SPECIFICATION

| | |
|-----------|--------|
| Model No: | TDPR01 |
| Weight: | 8kg |

4. ASSEMBLY

- 4.1.1. Carefully unpack the product and check the contents referring to the spares list, and as detailed in Fig.1. Should any items be missing or damaged contact your Sealey stockist.
- 4.1.2. Step 1. Measure the width of the front of your truck bed box and divide this number by 2. Measure from one side of the truck box in with that number to determine the center of you truck bed. Mark the center of the truck bed box for reference.
- 4.1.3. Step 2. Place the motorcycle tie down rack on the truck bed box with the center mounting hole matching the center mark from step 1. Position the motorcycle tie down rack as high as possible on the truck bed box. If your truck bed box has a lip at the top, the rack should fit squarely underneath the lip. Once the motorcycle tie down rack is centered and lined up, mark through the center mounting hole on the truck bed box. This is where your center mounting hole will be drilled.
- 4.1.4. Step 3. **Note:** Slide a block of scrap wood (optional) in between the truck bed box and the truck cab before drilling to prevent punching through the truck cab. Using the drill and 1/2" drill bit, drill a hole through the truck bed box at the mark from Step 2.

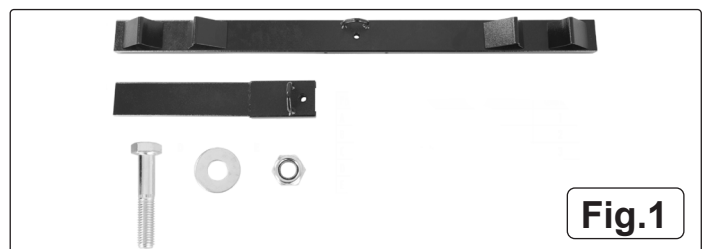

- 4.1.5. Step 4. Once the center hole is drilled, install the motorcycle tie down rack with a M12 x 80 hex bolt, washer, and nut from the hardware kit.
- 4.1.6. Make sure the motorcycle tie down rack is level and mark through the holes on each side. repeat step 3 for drilling the side holes and secure with the remaining M12 x 80 bolts, washers, and nuts.
- 4.1.7. Step 5. Using a wrench, securely tighten all bolts.

5. CLEANING

- ✓ Use warm water and mild soap to clean the motorcycle tie down rack. **DO NOT** use harsh detergents or solvents for cleaning. Doing so will damage the motorcycle tie down rack.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No Liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk